

NOPF-XP

The NOPF-XP includes 10 power and 10 sense spare contacts for 5 NO2FW-XP Chassis assemblies.

