



ASSEMBLY INSTRUCTION

NC4FX-TOP & NC10FX-TOP | XLR Cable Connector



IP65 RATED AND TOP-APPROVED.



1 CABLE & BOOT ASSEMBLY



A Cut cable end approx. 45°.



B Slide the bushing over the cable.

To ease the boot assembly apply some cable pulling lubricant to the cable ends.


2 ASSEMBLY INSERT AND CONNECTOR

A Wire size: max. 1.5 mm² / 16 AWG
Cable O.D.: 5.0 - 8.0 mm [0.19 - 0.32"]

A Prepare cable as shown.





B Insert wires into the terminals and solder them.

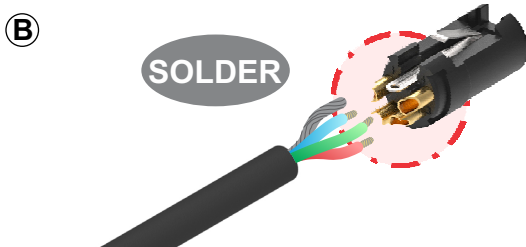

Wiring: 4 pole

10 pole

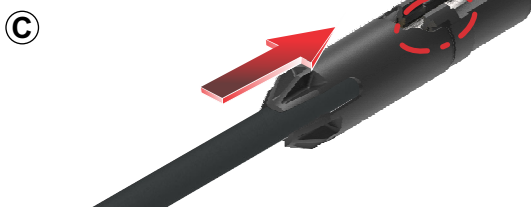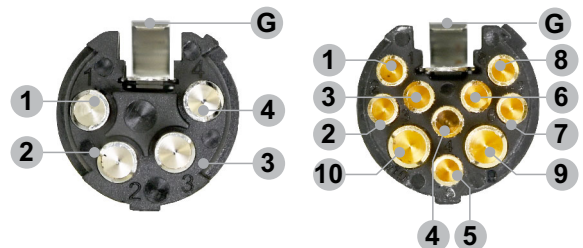

C Put chuck onto the cable.

Attention: Pay attention to the guiding key.



D



D Slide insert and chuck together into the housing.

Important:
Align the insert by positioning as shown.

E



E Finish the installation by turning the bushing onto the connector.

Attention:
Screw the bushing to the end of the thread.



FINISHED XLR TOP



FINISHED XLR CONNECTOR



More Information on the website

<https://www.neutrik.com/en/products/audio/xlr>



Draft. Nr.: BDA 637 V2
Update: 2023-03-21

Neutrik AG | LI-9494 Schaan
www.neutrik.com

Data subject to change without prior notice. © 2023 NEUTRIK®. NEUTRIK® are registered trademark of Neutrik AG. ALL RIGHTS RESERVED.