



ASSEMBLY INSTRUCTION

opticalCON® HYBRID MED | Contact Crimping

1 Wire preparation

(A)



(A)

Strip the isolation to 5 mm for all wires.

Use following AWG Sizes:

- POWER - AWG 16

2 Required Crimp Tools

(A)



(A)

DMC MH860 Crimp Tool

(B)




(B)

Crimp DIE

- POS-XP-POWER

3 Crimp Tool Setup

(A)

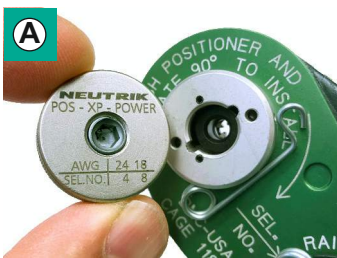

(A)


Use the correct Crimp DIE. Therefore check the labeling on the DIE.



(B)

Set the sel. No as noted on the Crimp DIE.

(C)

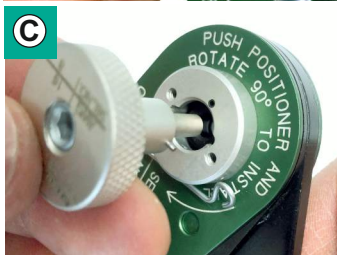

(C)

Insert the DIE.




(D)

Rotate 90° to lock the DIE.



4 Contact Crimping


A

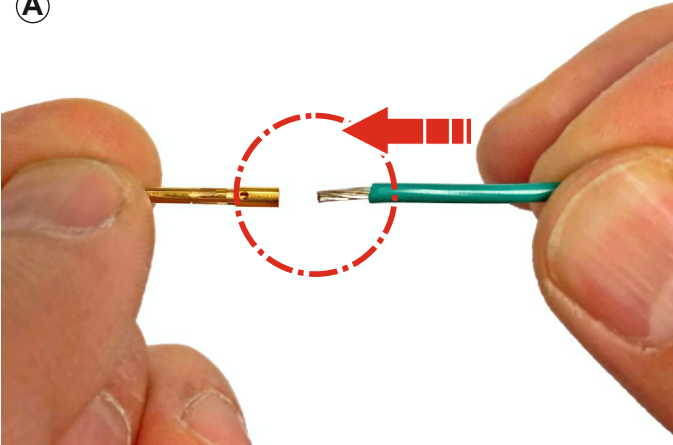

A

Attach the contact to the wire.

B

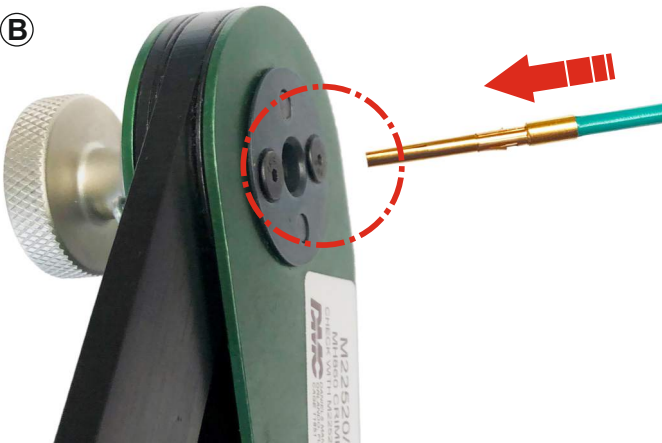


B

Insert the contact from the backside into the crimp tool.

When totally seated, crimp the contact.

C

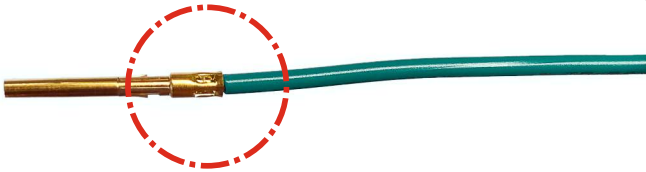

C

Contact is now crimped and can be inserted in the chassis.



| | | | |
|------------------------|-------------|-----------------------|-----------------------|
| Neutrik AG | LI | T: +423 / 237 24 24 | F: +423 / 232 53 93 |
| Neutrik USA Inc. | USA | T: +1 704 / 972 3050 | F: +1 704 / 438 9202 |
| Neutrik (UK) Ltd. | UK | T: +44 1983 / 811 441 | F: +44 1983 / 811 439 |
| Neutrik Vertriebs GmbH | DE/NL/AT/DK | T: +49 8131 / 280 890 | F: +49 8131 / 280 830 |

| | | | |
|-------------------------|-----|------------------------|-----------------------|
| Neutrik France | FR | T: +33 1 / 4131 6750 | F: +33 1 / 4131 0511 |
| Neutrik Tokyo Ltd. | JP | T: +81 3 / 3663 4733 | F: +81 3 / 3663 4796 |
| Neutrik Hong Kong Ltd. | HK | T: +852 / 2687 6055 | F: +852 / 2687 6052 |
| Neutrik India Pvt. Ltd. | IND | T: +91 / 982 05 43 424 | F: +91 / 22 26163 540 |

Draft. Nr.: BDA 612 V1 | Update: 2020-09-03 Data subject to change without prior notice. © 2020 NEUTRIK®. NEUTRIK® are registered trademark of NEUTRI AG. ALL RIGHTS RESERVED.